

A Whole New Sensation For A Whole New Orgasm

For most women, sexual pleasure is as much about the journey as the destination. SONA™ Cruise stimulates the entire clitoris - even the parts you don't see - with an eager, fluttering sonic hum, for a different kind of orgasm produced by the gentle deep-tissue massage of sonic waves. It's a prolonged climax after a sensual build-up, an orgasm that comes from somewhere deep within you. What's more, Cruise Control keeps your pleasure exactly right!

ORDERING REFERENCE NUMBER (EAN)

7350075 026096 (BLACK)
 7350075 026089 (PINK)
 7350075 026041 (CERISE)

AVAILABLE COLORS



Cerise

Pink


Black

SPECIAL FEATURE

What Is Cruise Control?

For the first time ever, the technology that has for years been synonymous with sports cars comes to your sex toys! Specially developed by LELO and exclusive to SONA Cruise, Cruise Control means that when it's pressed hard against your body it won't drop its power, so that you get a perfectly consistent, hassle-free experience. It's not a setting, it's completely automatic, and it eliminates the single most common complaint against pleasure products.

PRODUCT IMAGES

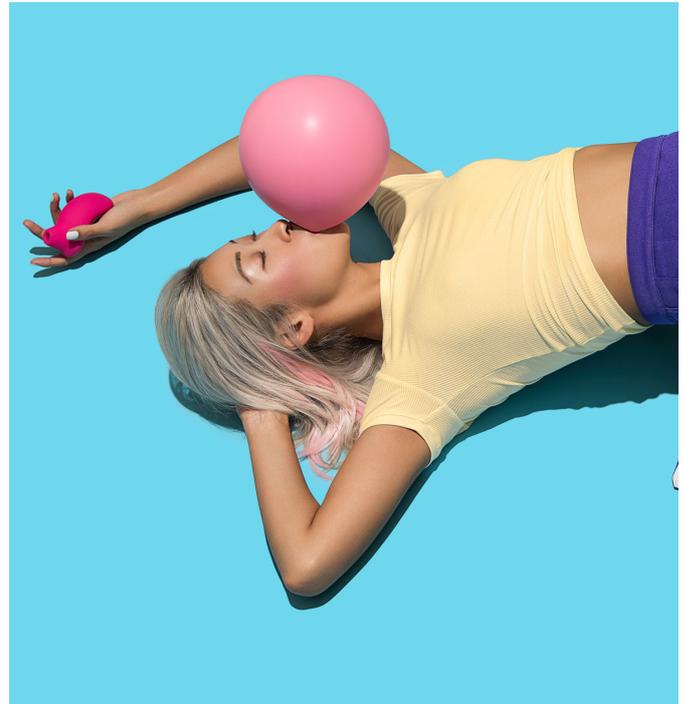

FEATURES

**Completely Waterproof
Easy to Clean**



Fully USB-Rechargeable



8 Pleasure Settings



**Ahead of Competitors in
EVERY Respect**

BENEFITS

The smooth, waterproof design makes it incredibly easy to keep clean.

Using the supplied USB charging cable, SONA Cruise can go wherever you go.

A well-designed selection of sensations for that just-right feeling.

More power, more features, more quality, more pleasure.

TECHNICAL DATA

Material: Silicone ABS

Finish: Matte, Glossy

Size: 99 x 88 x 56mm

Weight: 116g

Battery: Li-Ion 530mA 3.7V

Charging: 2h at 5.0V 400mA

User Time: 1h

Number of Modes: 8

Standby: 90 days

Frequency: 120Hz

Max. Noise Level: <50dB

Interface: 3-button interface

HOW TO USE:



Make sure the SONA™ is unlocked by pressing and holding the + and - buttons together for 3 seconds until the light turns on.

Press + button to turn on; press again to increase vibration strength.

Press () button to cycle through the 8 stimulation modes.

Press - button to reduce vibration strength; press and hold to turn off.